

1

2


3

4

5

6


REVISION RECORD			
LTR	ECO NO.	APPROVED:	DATE:

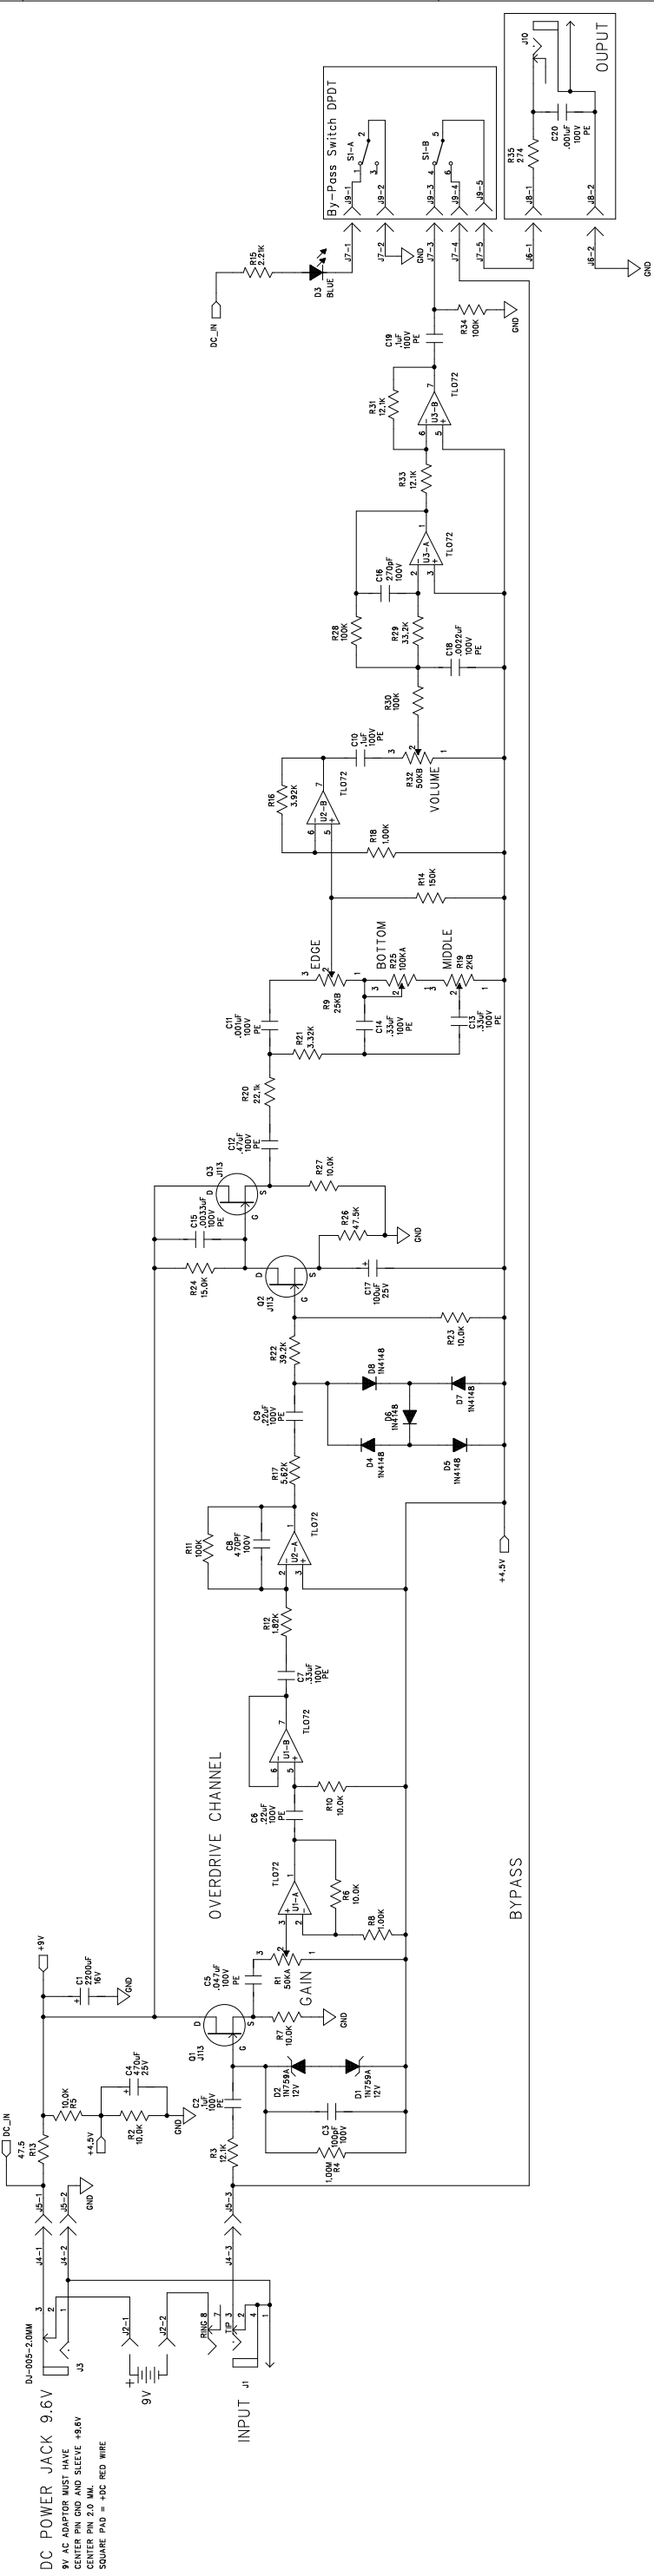

NOT VALID UNLESS STAMP IS RED

gallien technology

2240 PARAGON DRIVE SAN JOSE CA. 95131 VOICE: 408-441-8081 FAX: 408-441-8085			
TITLE: DIESEL DAWG			
APPROVALS		DATE	REV.
INIT		R.A.G.	1/29/01
DESIGNED:		R.A.G.	12/8/02
DRAWN:		B	DRAWING NO: 406-0770-A
ELEC:			PART NO: 206-0770-A
MECH:			COMPANY: GALLIEN-KRUEGER
O/A:			FILENAME: 6770A.sch
RELEASED:			



PCB WORK INSTRUCTIONS




DWG #420-0110-A1

NOTES:

- UNLESS OTHERWISE SPECIFIED:
- 1. SQUARE PADS ON THRU HOLE PARTS (ie: CONNECTORS, DIPS, SIPS, LEDS) DENOTE PIN 1.
 - 2. ALL BOARDS REQUIRE A COMPLETE AND THOROUGH VISUAL INSPECTION.
 - 3. ALL BOARDS MUST BE BARE BOARD TESTED.
 - 4. ASSEMBLE AND SOLDER PER ANSI/IPC-A-610B.

- LOADING:
- 5. CLIP BUSHING TABS FROM POTS R1, 9, 19, 25, 32
 - 6. MOUNT D3 ON BACK OF BOARD AS SHOWN IN DETAIL "A".
 - 7. WIRES MAY BE INSTALLED IN PLACE OF HEADERS J4-5, J6-8, AND J7-9, AS SHOWN IN DETAIL "B".
 - 9. MASK HOLES ON J2 AND D3 TO KEEP CLEAN FOR ASSEMBLY AFTER WAVE.

- FINAL QA:
- 10. CHECK TO SEE ALL POTS, JACKS, AND SWITCHES ARE MOUNTED FLUSH AND STRAIGHT

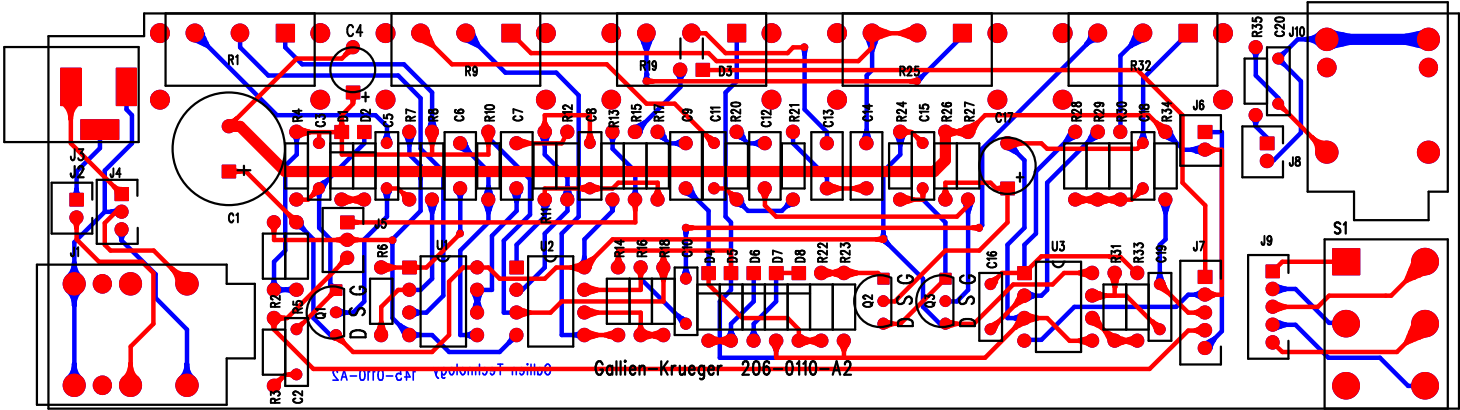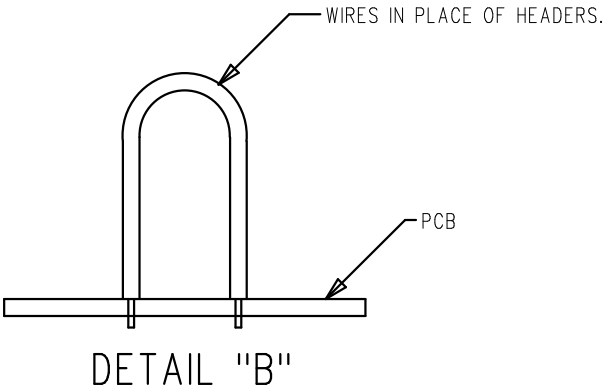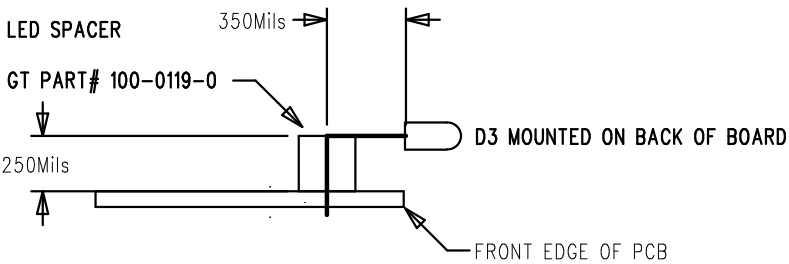

PCB WORK INSTRUCTIONS




DWG #420-0770-A

NOTES:

- UNLESS OTHERWISE SPECIFIED:
- 1. SQUARE PADS ON THRU HOLE PARTS (ie: CONNECTORS, DIPS, SIPS, LEDS) DENOTE PIN 1.
 - 2. ALL BOARDS REQUIRE A COMPLETE AND THOROUGH VISUAL INSPECTION.
 - 3. ALL BOARDS MUST BE BARE BOARD TESTED.
 - 4. ASSEMBLE AND SOLDER PER ANSI/IPC-A-610B.

- LOADING:
- 5. CLIP BUSHING TABS FROM POTS R1, 9, 19, 25, 32
 - 6. MOUNT D3 ON BACK OF BOARD AS SHOWN IN DETAIL "A".
 - 7. WIRES MAY BE INSTALLED IN PLACE OF HEADERS J4-5, J6-8, AND J7-9, AS SHOWN IN DETAIL "B".
 - 9. MASK HOLES ON J2 AND D3 TO KEEP CLEAN FOR ASSEMBLY AFTER WAVE.

- FINAL QA:
- 10. CHECK TO SEE ALL POTS, JACKS, AND SWITCHES ARE MOUNTED FLUSH AND STRAIGHT

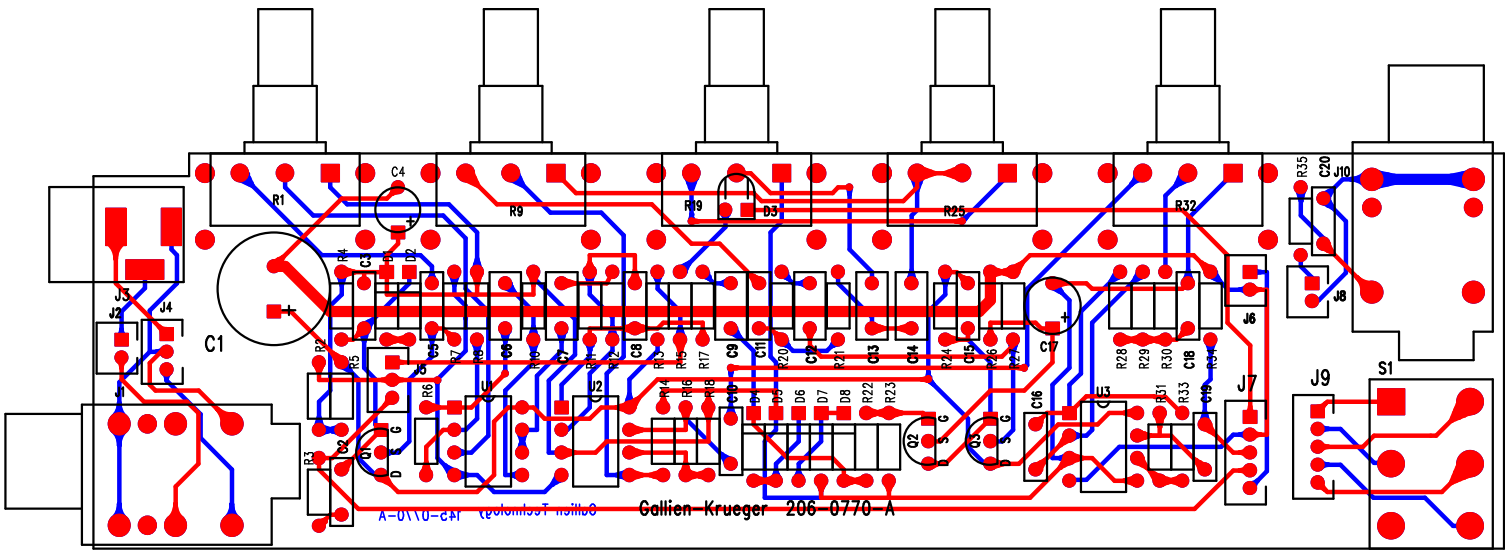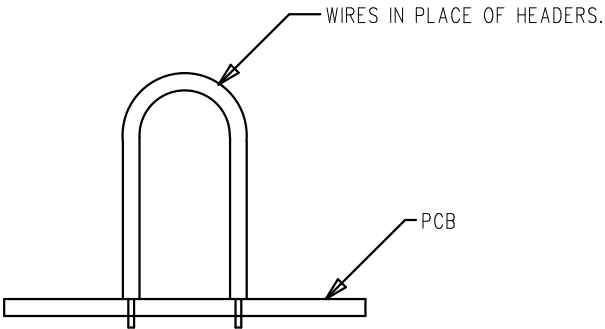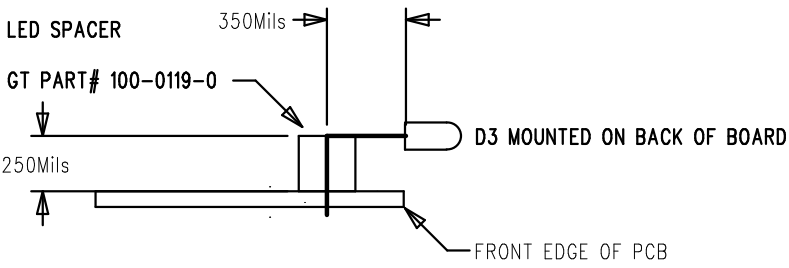

[illegible]

Diesel Dawg Main Board 206-0770-A

[illegible]